

Ecoustic® T Trim Installation



INSTYLE

Ecoustic® T Trim Installation

Simple Installation



T-Trims can be simply tapped into panel junctions of installed 13.5mm, 15mm, 25mm, 50mm + 75mm panels

Easy to Coordinate + Versatile

T-Trims are available with natural anodised or black powdercoat finish providing effortless co-ordination with a large range of panel finishes


Complementary

T-Trims complement the discrete aesthetic of our Ecoustic® Edging

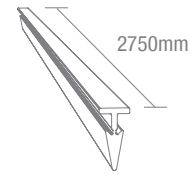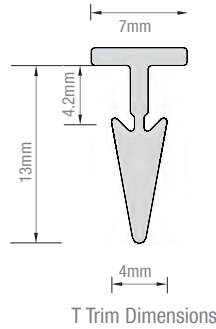


Step 1

- Ensure T-Trim length is suitable for exposed panel area
- Cut to length if necessary
- Align T-Trim to Ecoustic® panel junction

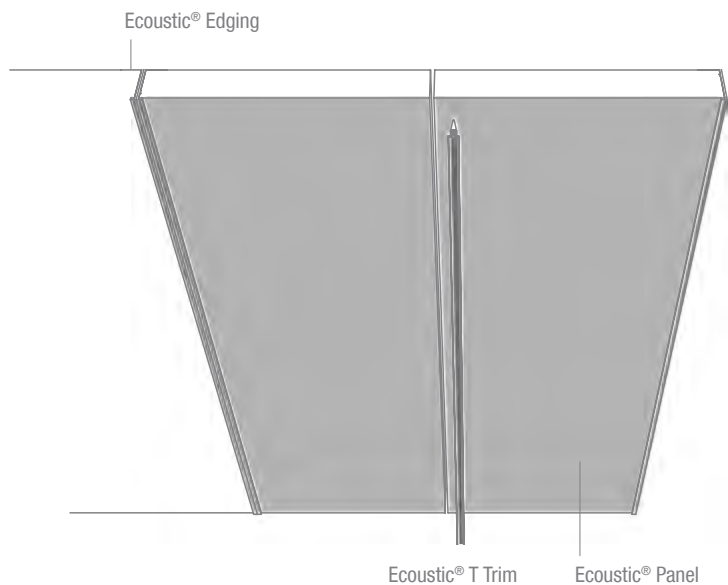

Step 2

- If the void between adjoining panels is larger than the 4mm arrow shaped head of the T-Trim or the T Trim is not holding in position, carefully apply small beads of adhesive within the panel junction void
- Ensure adhesive is applied in accordance with adhesive manufacturers specifications, and is unable to reach the exposed panel surface
- Softly tap T Trim into panel junction

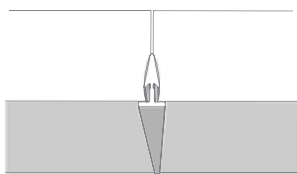

Ecoustic® T Trim is held within panel junction by panel compression

