

Ecoustic® Edge Installation + Care




INSTYLE

Ecoustic® Edge Installation


ASSEMBLY INSTRUCTIONS

Supplied

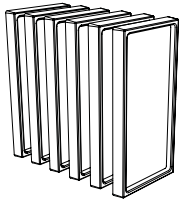

16 x Ecoustic Edge tiles
Sold in packs of 16 per colour
17 x 4-way joiner clips (inc. 1 spare)
Clip template
Installation instructions

Source

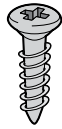


Flat-head c/sunk
25mm (1") 10g
[4-8 per tile]




Power drill

Essential

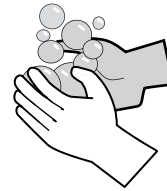


Clean hands
Handle with care
during installation

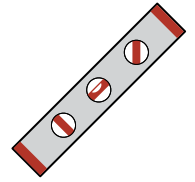

Spirit level

Front View

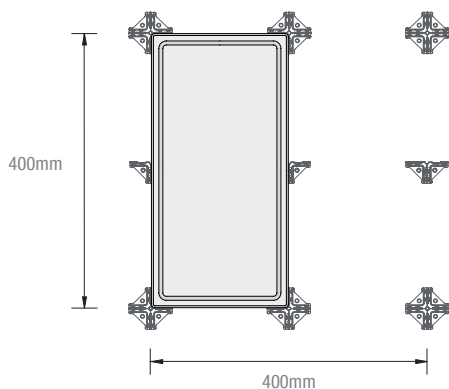

4 way clip

Clear ABS
16 + 1 spare 4-way clips are supplied with each box
Single clip template is included in each box



Complete
Use a complete clip for each junction of 4 tiles




Half
Break a clip in half for each straight edge 2 tile joins



Quarter
Break clip into quarters for each single tile corner


Example 1600mm x 1600mm Clip Layout

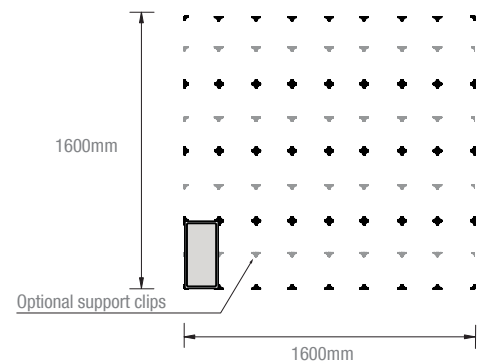

HORIZONTAL INSTALLATION


Step 1

In most situations it is best to measure up from the floor and mark a straight line along the base of the area, this line is your datum. On the datum mark your starting position in the bottom left hand corner.

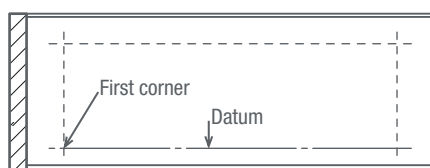


Step 2

Using fixings suitable for your substrate, fix the first corner in place.
Note: Always use a mechanical means of fixing.

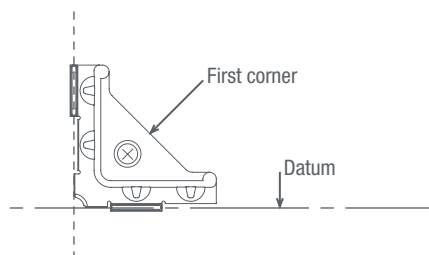

Step 3

Use the supplied template to fix the next 3 clips in place.

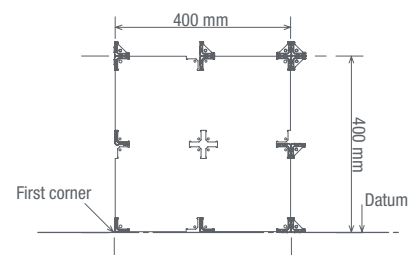


Ecoustic® Edge Installation

HORIZONTAL INSTALLATION - CONTINUED

Step 4


Using the template work your way up the wall in columns. Finish the top with corner clips on corners + edge clips on straight joins.

Note: never use the tiles to measure spacing.

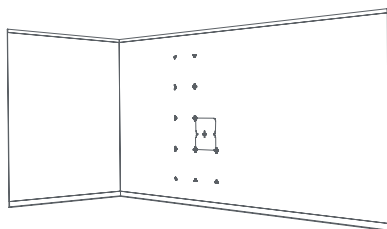


Step 5

Once you have two columns up, double check your spacing by installing the first column of tiles. Always stay one column ahead of the installed tiles so the tiles don't interfere with the spacing.

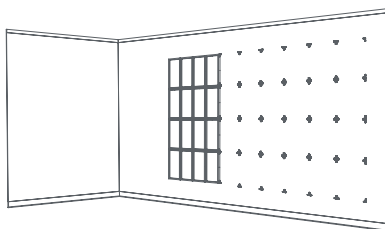

Step 6


Install the rest of your clips and put up the tiles to finish. For ceiling installations, we recommend the use of glue for additional fixing.

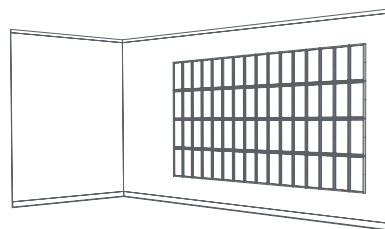

DIAGONAL INSTALLATION

Step 1


In most situations it is best to measure up from the floor and mark a straight line along the base of the area, this line is your datum. On the datum mark your starting position in the bottom left hand corner.

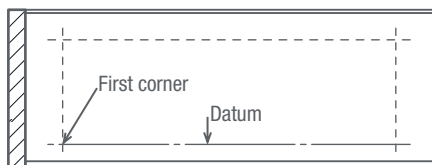

Step 2

Ensure that template is aligned at correct angle of installation.

Begin installing tile clips in relevant configurations for the intended tile installation.

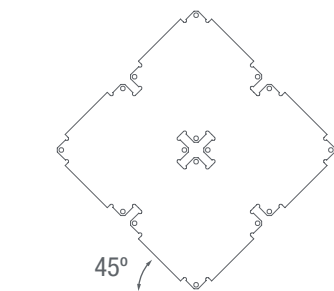


Step 3

Using fixings suitable for your substrate, fix the first corner in place.

Note: Always use a mechanical means of fixing.


Note: The bottom corner of the installation (and all other perimeter corners) require 1 only clip.

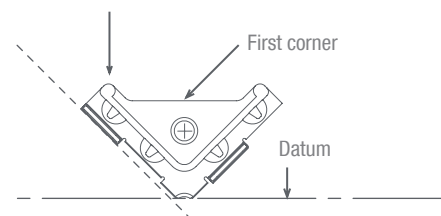

Step 4


Using the template, work your way across the wall in rows. Finish the top with corner clips on corners + edge clips on straight joins.

Note: never use the tiles to measure spacing.

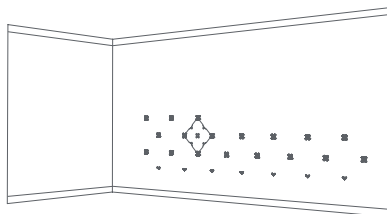


Step 5

Once you have two rows up, double check your spacing by installing the first row of tiles. Always stay one row ahead of the installed tiles so the tiles don't interfere with the spacing.

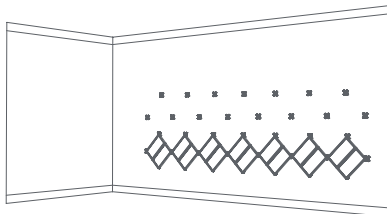

Step 6

Install the rest of your clips and put up the tiles to finish.

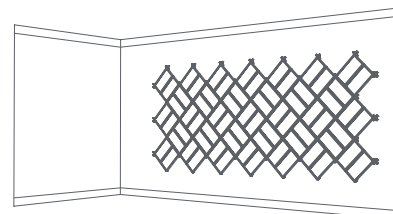

Care

Please Note

- Care must be taken when cleaning as these instructions apply to the fabric face only and the possible effect of the cleaning regime on underlying bases and wall surface must be considered
- For these reasons it is suggested to spot clean only and that it be carried out by a professional cleaner

Regular Care

- Protect from direct heat and sunlight
- To prevent dust build up, lightly dust with a soft cloth or vacuum with a soft brush attachment

Cleaning

- Professional cleaning is always recommended
- Always test any any cleaning products on an inconspicuous area prior to commencing cleaning
- Blot any excess spills from the material with a dry clean sponge or cloth
- Treat all stains and spills as soon as possible
- Most marks can be spot cleaned by lightly wetting the affected area with a mild detergent and warm water solution
- Do not saturate the tile
- Do not scrub or abrade the tile surface as this will affect the surface finish
- Once the stain or mark has been loosened then blot the excess solution out with a dry clean sponge or cloth
- Sponge afterwards with clean warm water and dry any excess moisture with a dry clean sponge or cloth
- The fabric can also be spot cleaned with dry cleaning fluid, lightly sponge a small amount of dry cleaning fluid and blot
- Dry away from direct heat and sunlight
- Do not use carpet shampoo